



Lighting The Pilot Light

1. Push the Burner Control Knob IN and turn ANTI-CLOCKWISE to the PILOT position.

IMPORTANT! DO NOT force the Knob.

NOTE: For the initial start or whenever the gas bottle has been changed, push the Control Knob IN and hold in this position for two minutes to ensure all air has been purged from the system before proceeding.

2. Holding the knob in the 'pushed IN' position, press the piezo ignition button (B, Fig.1) repeatedly

until the pilot light ignites.

3. Continue to hold the Control Knob 'IN' for a further 1 minute after the pilot light is lit. When it is

released, it will pop back outwards and the pilot light should remain 'ON'.

Low Burner Setting

With the pilot light lit, turn the Burner Control Knob anti-clockwise until it reaches the first indent.

HIGH Burner Setting

Turn the Burner Control Knob anticlockwise until it stops.

NOTE: Always allow the burner to operate in the LOW position for 5 minutes or so, before turning to the High position.

To turn the patio heater OFF...first push the Burner control Knob 'IN' and turn it fully CLOCKWISE, then, when the flame has extinguished, turn the supply OFF at the gas bottle.

IMPORTANT! If the Burner fails to operate, turn the Burner Control Knob to the OFF position and wait 5 minutes before trying again.

